

Quick Start Guide:

1. An adult must install the batteries before use. (See section 2.)
2. Press the ● (record) button and speak into the microphone.
3. Press the ► (play) button to play back your recording.
4. Use the slider to adjust the pitch of the playback (making your voice sound lower or higher).

Disguise your voice to confuse rival spies! With this voice-changing device, you can record your voice and distort it upon playback, using the slider to make it sound higher or lower.


WARNING! Not suitable for children under 3 years. Choking hazard — small parts may be swallowed or inhaled.
Keep the packaging and instructions as they contain important information.

1. Setting up and using the voice changer:

- Have an adult remove any old batteries (if applicable) and install the new batteries. (See section 2 and image 1.)
- Set the slider to the center position. This will guarantee the best possible recording.
- To record your message, press and hold the ● (record) button. You will hear a beep, indicating the device has begun recording.
- Hold the voice changer about 5 cm (2 inches) away from your mouth and speak directly into the microphone. Release the record button when you are finished. You will hear two beeps, indicating your recording has been saved. If you hear two beeps while you are still holding the ● (record) button, you have reached the maximum duration, meaning the recording has automatically ended and your recording has been saved.
- Press the ► (play) button and play back your recording.
- Adjust the slider by moving it back and forth to distort and warp the recorded voice.

2. Installing and replacing the batteries:

- **IMPORTANT:** An adult should insert and change the batteries.
- Use a Phillips-head screwdriver to loosen the screw on the battery compartment. Lift off the cover. The screw will remain in the cover.
- Remove the old batteries (if applicable) and insert two new AAA (1.5-volt, type LR03) batteries. Pay attention to the correct polarity (see image 1). Close the battery compartment and use the screwdriver to screw the cover back into place.

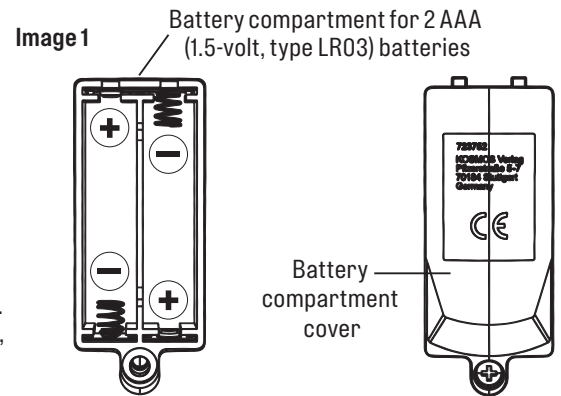

Safety for Experiments with Batteries:

- An adult should insert and change the batteries.
- To operate the device, you will need two AAA batteries (1.5-volt, type LR03), which could not be included in the kit due to their limited shelf life.
- Avoid a short circuit of the batteries. A short circuit can cause the wires to overheat and the batteries to explode.
- Different types of batteries or new and used batteries are not to be mixed.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Batteries are to be inserted with the correct polarity (+ and -). Press them gently into the battery compartment. See above.
- Non-rechargeable batteries are not to be recharged. They could explode!
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before being charged.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Dispose of used batteries in accordance with environmental provisions, not in the household trash.
- Avoid deforming the batteries.
- Do not leave the device in direct sunlight or expose it to other sources of heat.
- **IMPORTANT!** Protect the device from moisture. Clean it with a damp cloth and allow it to dry thoroughly before using it again.

NOTES ON DISPOSAL OF ELECTRICAL AND ELECTRONIC COMPONENTS

The electronic components of this product are recyclable. For the sake of the environment, do not throw them into the household trash at the end of their lifespan. They must be delivered to a collection location for electronic waste, as indicated by the following symbol:
Please contact your local authorities for the appropriate disposal location.



© 2022 Franckh-Kosmos Verlags-GmbH & Co. KG, Pfizerstrasse 5-7, D-70184 Stuttgart, Germany.

This work, including all its parts, is copyright protected. Any use outside the specific limits of the copyright law without the consent of the publisher is prohibited and punishable by law. This applies specifically to reproductions, translations, microfilming, and storage and processing in electronic systems and networks. We do not guarantee that all material in this work is free from copyright or other protection.

Layout, typesetting, packaging, and instructions: Michael Schlegel, komuniki, Würzburg
Cover illustration: Wolfgang Peschke, Peschke Grafik Design, Ostfildern
Contents image (image 2): Michael Flaig, Prostudios, Stuttgart

© 2022 Thames & Kosmos, LLC, Providence, RI, USA
Thames & Kosmos® is a registered trademark of Thames & Kosmos, LLC.
Editing: Ted McGuire and Peter Bowen
Additional illustrations: Dan Freitas and Ted McGuire
Packaging artwork: Dan Freitas

We reserve the right to make technical changes.

Printed in China / Imprimé en Chine

Distributed in North America by Thames & Kosmos, LLC.
Providence, RI 02903
Phone: 800-587-2872; Web: www.thamesandkosmos.com

Model: 548008

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.